

NE360H Case for Samsung XCover Pro & Ingenico RP457C-AJ (CT3114)



- 1 Slide the locking tab over to unlock the cover on the case.



- 2 Grip the top portion of the card reader and apply pressure to separate the cover from the case.



- 3 Plug the cable on the backside of the case into the card reader.



- 4 Place the card reader into the cavity in the case.



- 5 Fit the bottom edge of the card reader cover into the bottom of the case. Pivot the cover down over the card reader.



- 6 Slide the locking tab over to secure the cover to the case.



- 7 Slide the locking tab over to unlock the top cover on the case.



- 8 Remove the top cover from the case.

NE360H Case for Samsung XCover Pro & Ingenico RP457C-AJ (CT3114)



9 Slide the device into the other side of the case. Ensure that the power port on the device will align with the connector in the case.



10 Place the top cover over the device.



11 Slide the locking tab over to the left to secure the top cover to the case.

Removal Steps



12 Slide the locking tab over to the right to release the top cover from the case.



13 Remove the top cover from the case.



14 Slide the device out of the case.



15 Slide the locking tab over to release the card reader cover from the case.

NE360H Case for Samsung XCover Pro & Ingenico RP457C-AJ (CT3114)



- 16 Grip the top portion of the card reader and apply pressure to separate the cover from the case.



- 17 Unplug and remove the card reader from the case.